 


ELEKSPA 67

**Rchargeable swimming pool and spa
vacuum cleaner**

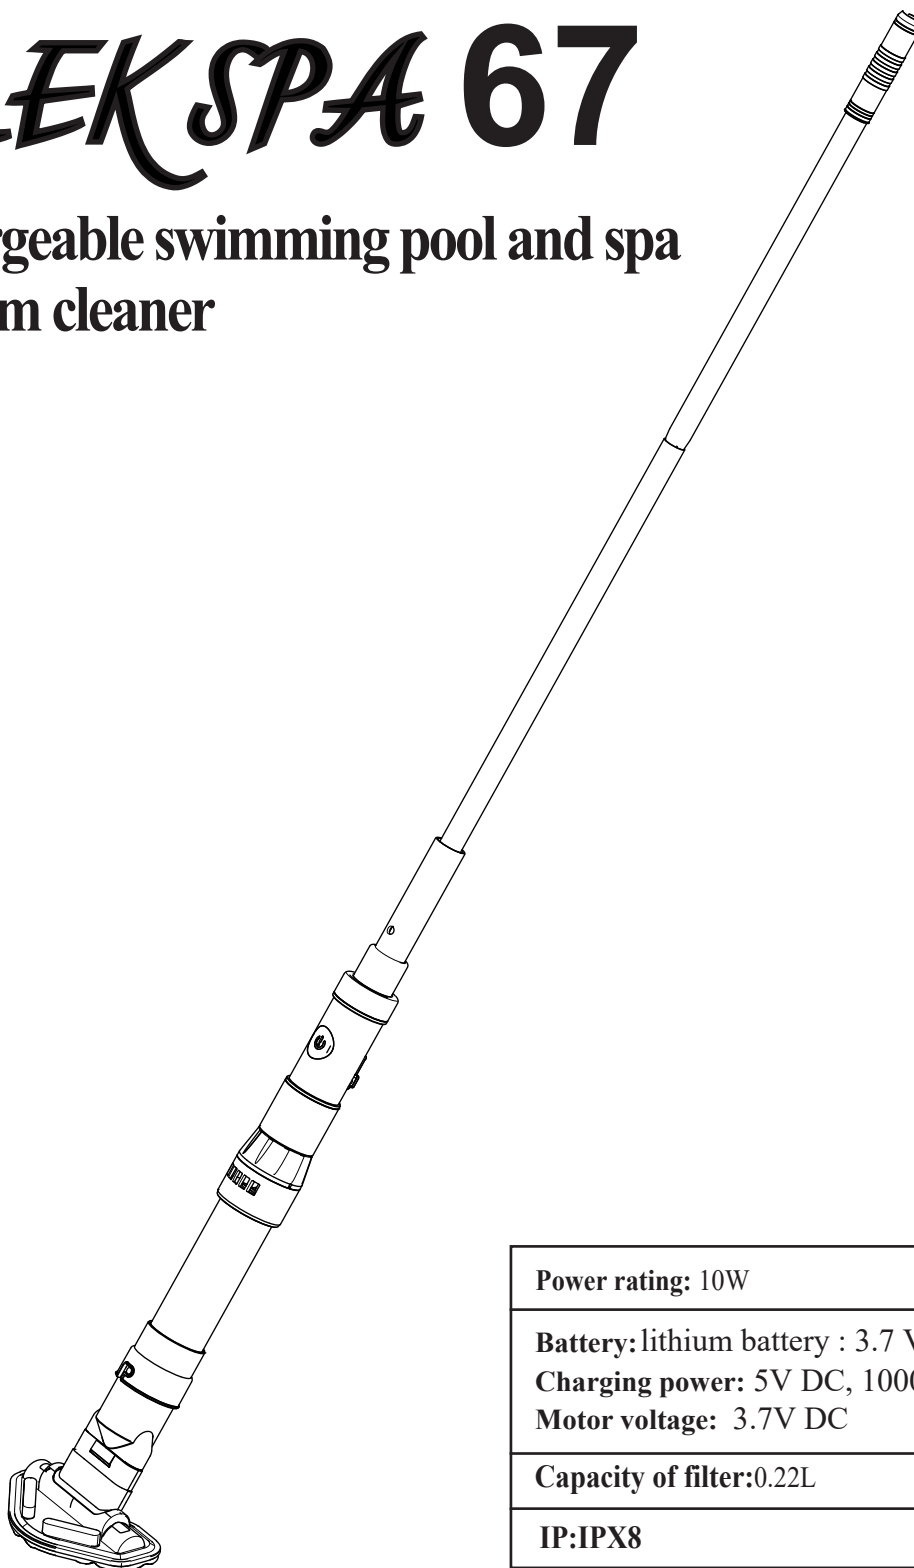

Power rating: 10W
Battery: lithium battery : 3.7 V DC, 2000 mAh
Charging power: 5V DC, 1000mAh
Motor voltage: 3.7V DC
Capacity of filter: 0.22L
IP: IPX8



Ningbo Poolstar Pool Products Co., Ltd

www.cnpoolstar.com

SAFETY WARNING

When installing and using this electrical equipment, basic safety precautions should always be followed, including the following:

- (1) READ AND FOLLOW ALL INSTRUCTIONS.
- (2) Ensure that children do not attempt to access cleaner while it is operating.
- (3) The cleaner must only be supplied at safety extra-low voltage in accordance to the marking applied on it.
- (4) If an USB charging adaptor (not included) is used, make sure to connect it to the power source through a residual current device (RCD) / a ground fault circuit interrupter (GFCI). If in doubt, consult a qualified, professional electrician.
- (5) The cleaner is designed to clean the swimming pool, SPA.
- (6) Please use the original batteries and USB Line when using.
- (7) Only charging it when the cleaner is power off.
- (8) Put the cleaner into a clean and dry place. Do not expose it under the sun, or close to explosive.
- (9) The filter bag is easy to be broken when there is sharp substances under water.
- (10) Do not close to the vacuum head when it is working, due to its suction power, especially for the human body, animals, hairs or clothes.
- (11) Do not disassemble the cleaner without professional guidance or notice from the authorized distributor or manufacturer.
- (12) Do not leak the lubricant oil, and it causes water polluted.
- (13) Stop to work the cleaner when there is anything wrong; Please contact with the authorized distributor or replace it to the original parts/accessories.
- (14) Cleaner working conditions:
 - (14-1) Water depth from 45cm to 140cm
 - (14-2) Water temperature: 4°C(39.2°F)-42°C(107.6°F).
- (15) SAVE THESE INSTRUCTIONS

USB lane

- (1) Only output voltage 5V is allowed for charger including USB joint;
- (2) For indoor use only. The charger should not be used outdoor and not be exposed to rain, humidity, any liquid or heat.
- (3) Keep the charger out of children.
- (4) Never use the charger if any damage is found.
- (5) Do not handle the cleaner and charger with wet hands and bare feet, when charging the cleaner.
- (6) Disconnect the charger from power when not in use.
- (7) If the USB lane is damaged, it must be replaced by a new charger to avoid danger.
- (8) Make sure the cleaner, USB lane and charger are totally dry before charging.
- (9) Charge the cleaner 5-6 hours prior to the first use. Normally cleaner can be operated about 50 minutes after fully charged.

Above warning and cautions are not intended to incorporate all possible instances for risks and/or severe injury. Pool/spa owners should always exercise intensive caution and common sense when operating the cleaner.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
How to use ?

1. How to assemble the cleaner ?

1.1 Component installation

ELEKSPA 67 consists of 6 main parts:

- (1)Suction head (2)Joint (3)Transparent filter (4) Main body
(5)Alu. poles (2pcs) (6)USB lane

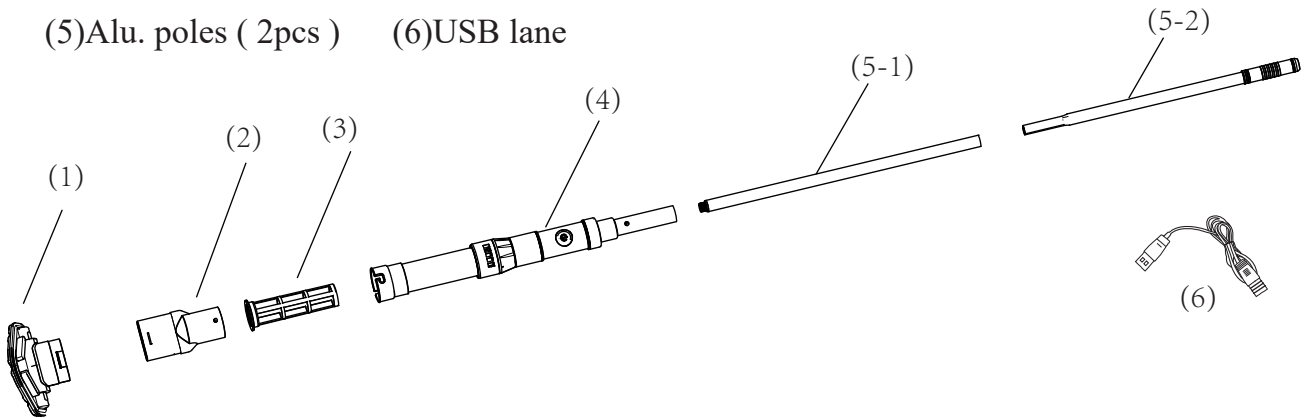


1.2 Basic usage


It is only designed to clean the children pool and SPA. Improper uses may damage the cleaner, and it is not into warranty.

1.3 Filter bag assembly

 Insert the transparent filter into the body,[fig.A].
then insert and clip the connector.[fig.B]

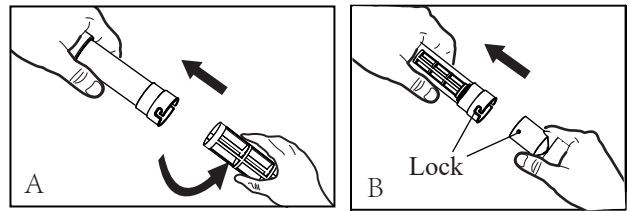

 1.4 How to connect with charger ?


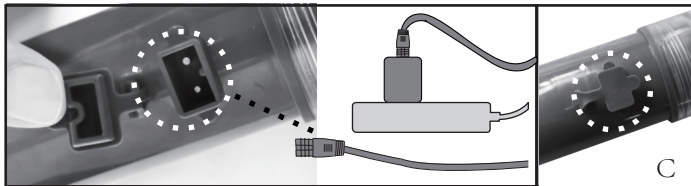


Attention: Charge the cleaner 4-5 hours prior to the first use.
Normally cleaner can be operated about 50 minutes after fully charged.

- (1)Insert one end of the USB cable into the USB charger, and the other end of the charger into the power supply;
- (2) Open the power plug in the main body and plug the other end of the USB cable into the charging port. The product display light is red, indicating normal charging.
- (3)Around 4-5 hours later, the light turns to green, it means the machine is full of power now.
- (4) Pull out one end of the USB cable from the charging port and plug the power supply plug back to the charging port to seal it.[fig.C]



1.5 ON-OFF Button

  Press the power on / off button on the main body
[fig.D]to start using the product.

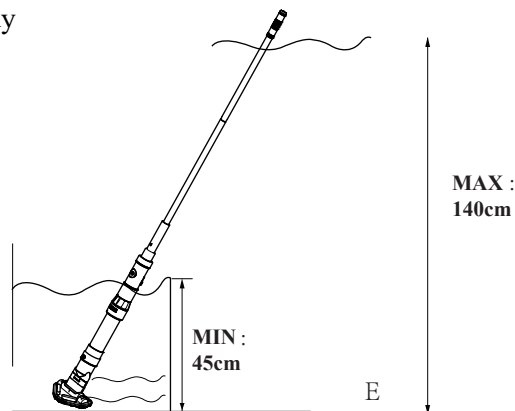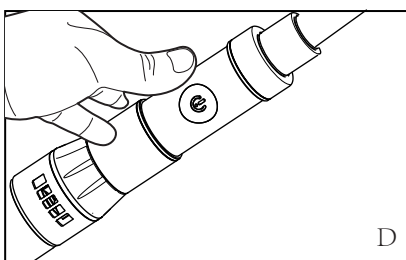


1.6 Connection of aluminum poles

  
The product consists of two sections of aluminum tubes, which are inserted into the main handle and tightened [fig.F] , Insert another aluminum tube into the threaded aluminum tube [fig.G] ,The maximum length of the two aluminum tubes can reach 150cm after being connected.

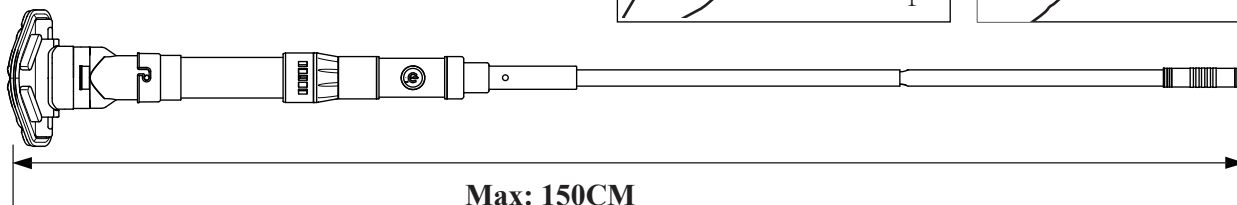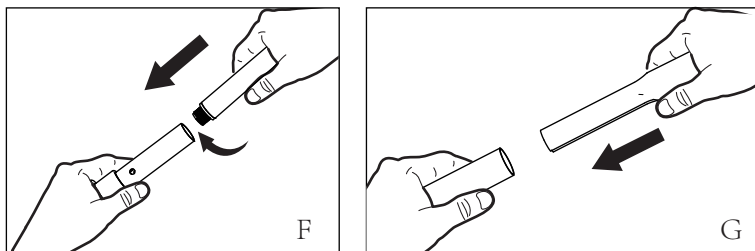

 
2. How to clear the filters?

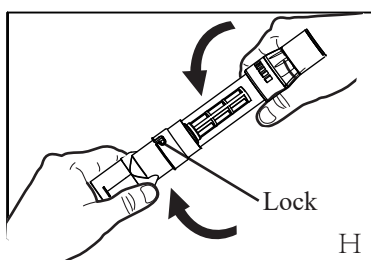

 (1)Turn off the switch take the suction head apart as indicted [fig.H]

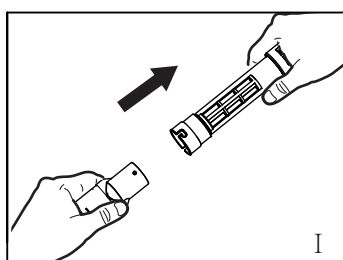

 (2)Remove the filter and take out the rubbish, then clean the filter [fig.I].

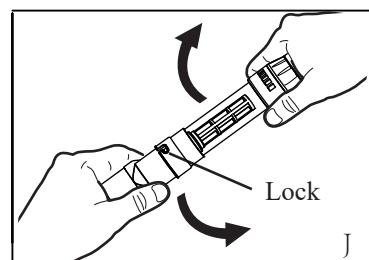

(3)Reinstall the filter bag in the main body as indicted [fig.J].

3. Trouble shooting

Problem	Possible Cause	Action
Cleaner doesn't work	Battery is running out	Charge the battery again. Normally cleaner can operate 50 minutes after fully charged.
	Battery is dead	Contact dealer for battery replacement. WARNING! When you replace the battery, please contact the local dealers to purchase the original lithium battery in case that the electric cleaner is destroyed.
Small suction	Check battery capacity	Replace new battery
	Too much rubbish in the filter	Clean the rubbish
Abnormal sound	Please check the motor impeller	Unscrew the suction and clean the foreign matter on the impeller
Cleaner cannot be recharged	Battery is dead	Contact dealer for battery replacement. WARNING! When you replace the battery, please contact the local dealers to purchase the original lithium battery in case that the electric cleaner is destroyed.
	The charger is damaged	Replacement of charger
	USB lane broken	Contact dealer for proper transformer. WARNING! Using wrong charger will result in damaging the cleaner /battery and void the warranty.

4.

Environmental Programmes

	Please respect the local regulations and help to protect the environment. Return non-working electrical equipment to a facility appointed by your municipality that properly recycles electrical and electronic equipment, Do not dispose them in unsorted waste bins. Remove batteries before disposing of the product.
--	---

We reserve the right to change all or part of the features of the articles or contents of this document, without prior notice.